



EJB - Fuses

- F1 (26) TCM
- F2 (22) Glow Plug Monitoring (Diesel)
Degas Valve (Sigma)
- F3 (9) EHPAS(DW10 only)
- F4 (8) Glow plugs (12A690)
- F5 (7) Engine cooling fan (12A690)
- F6 (27) HEGO sensors 1, VVT
- F7 (23) Relay coils
- F8 (30) PCM ECR feed
- F9 (28) Injectors, DW 12 PCV
- F10 (24) ECM 30 feed
- F11 (31) Valves, MAF Contol
- F12 (29) WIF, Coils, MAF Diesel
Glow Plug relay A/C Clutch relay (DW12 only)
- F13 (25) A/C relay
- F14 (32) Diesel filter heater
I5 vacuum pump
- F15 (10) Starter relay fuse
- F16 (1) PTC heater
- F17 (2) SJB Kl.30 A_supply
- F18 (3) SJB Kl.30 B_supply
- F19 (4) RJB Kl.30 C_supply
- F20 (5) RJB Kl.30 D_supply
- F21 (6) SPARE
- F22 (20) Wiper module
- F23 (16) Rear Window Defrost
- F24 (19) Headlamp washer
- F25 (14) ABS valves
- F26 (13) ABS pump
- F27 (12) Fuel Fired Heater
- F28 (11) Heater Blower
- F29 (15) SPARE
- F30 (39) SPARE
- F31 (40) Horn
- F32 (41) SPARE
- F33 (42) Ligth Switch Module, EJB coils
- F34 (17) Left front window defrost
- F35 (18) Right front window defrost
- F36 (44) ABS 30 feed
- F37 (37) Heated washer nozzles
- F38 (38) FLR + FSM
- F39 (46) AFS bending lamp
- F40 (45) SPARE
- F41 (33) IP 15 feed
- F42 (34) PCM/ TCM/ EHPAS 15 feed
- F43 (35) Headlamp levelling CD-LL, DBL/ GDL mod. 15 feed
- F44 (36) I5 vacuum pump 15 feed
- F45 (43) Rear Wiper 15 feed

EJB - Relays:

- R1 (EPR2) Starter Relay
- R2 (EPR1) ECR Relay
- R3 (EMR1) A/C clutch relay
- R4 (EPR3) Glow plug Relay Diesel, Dega Valve (Sigma)
- R5 (EPR4) FAN relay
- R6 (EPR5) Front Win. Defr.
- R7 (EPR6) 15 relay
- R8 (EMR3) Front wiper hi/lo relay (CD345)
- R9 (EMR4) Horn relay
- R10 (ENR1) Headlamp washer relay
- R11 (EMR2) Front wiper on/off relay (CD345)
- R12 (EMR5) Auto Trans Startlock



Handwritten notes on the left side of the page:

ULN

□

□