

- EJB - Fuses**
- F1 (26) TCM
 - F2 (22) Glow Plug Monitoring (Diesel)
Degas Valve (Sigma)
 - F3 (9) EHPAS(DW10 only)
 - F4 (8) Glow plugs (12A690)
 - F5 (7) Engine cooling fan (12A690)
 - F6 (27) HEGO sensors 1, VVT
 - F7 (23) Relay coils
 - F8 (30) PCM ECR feed
 - F9 (28) Injectors, DW 12 PCV
 - F10 (24) ECM 30 feed
 - F11 (31) Valves, MAF Contol
 - F12 (29) WIF, Coils, MAF Diesel
Glow Plug relay A/C Clutch relay (DW12 only)
 - F13 (25) A/C relay
 - F14 (32) Diesel filter heater
I5 vacuum pump
 - F15 (10) Starter relay fuse
 - F16 (1) PTC heater
 - F17 (2) SJB Kl.30 A_supply
 - F18 (3) SJB Kl.30 B_supply
 - F19 (4) RJB Kl.30 C_supply
 - F20 (5) RJB Kl.30 D_supply
 - F21 (6) SPARE
 - F22 (20) Wiper module
 - F23 (16) Rear Window Defrost
 - F24 (19) Headlamp washer
 - F25 (14) ABS valves
 - F26 (13) ABS pump
 - F27 (12) Fuel Fired Heater
 - F28 (11) Heater Blower
 - F29 (15) SPARE
 - F30 (39) SPARE
 - F31 (40) Horn
 - F32 (41) SPARE
 - F33 (42) Ligth Switch Module, EJB coils
 - F34 (17) Left front window defrost
 - F35 (18) Right front window defrost
 - F36 (44) ABS 30 feed
 - F37 (37) Heated washer nozzles
 - F38 (38) FLR + FSM
 - F39 (46) AFS bending lamp
 - F40 (45) SPARE
 - F41 (33) IP 15 feed
 - F42 (34) PCM/ TCM/ EHPAS 15 feed
 - F43 (35) Headlamp levelling CD-LL, DBL/ GDL mod. 15 feed
 - F44 (36) I5 vacuum pump 15 feed
 - F45 (43) Rear Wiper 15 feed

- EJB - Relays:**
- R1 (EPR2) Starter Relay
 - R2 (EPR1) ECR Relay
 - R3 (EMR1) A/C clutch relay
 - R4 (EPR3) Glow plug Relay Diesel, Dega Valve (Sigma)
 - R5 (EPR4) FAN relay
 - R6 (EPR5) Front Win. Defr.
 - R7 (EPR6) 15 relay
 - R8 (EMR3) Front wiper hi/lo relay (CD345)
 - R9 (EMR4) Horn relay
 - R10 (ENR1) Headlamp washer relay
 - R11 (EMR2) Front wiper on/off relay (CD345)
 - R12 (EMR5) Auto Trans Startlock



