

## Registrations

We now manually approve all new user accounts due to a large influx of spam bots. Accounts are normally approved within 48 hours. If you need any help with using this Wiki, please ask here: [Talk:Ford.com Wiki Submission Forum](#)

## Fuse & Relay Information - Mk4


The Ford Mondeo hit our roads in 1993, and has consistently been a sales success. Now on it's 4th incarnation, it remains a drivers favourite. For more information, visit the [Ford Mondeo](#) forum on [TalkFord.com](#), the definitive resource site covering all Fords from the present day to the 1970's.

<b>Contents</b> <span>[hide]</span>
1 Engine compartment fuse box
1.1 Fuse and relay layout
1.2 Fuse types
1.3 Fuse information
1.4 Relay information
2 Central fuse box – fuse information
3 Rear fuse box
3.1 Fuse and relay layout
3.2 Fuse information
3.3 Relay information

### Engine compartment fuse box

#### Fuse and relay layout

Engine compartment fuse box, also known as Engine Junction Box (EJB).

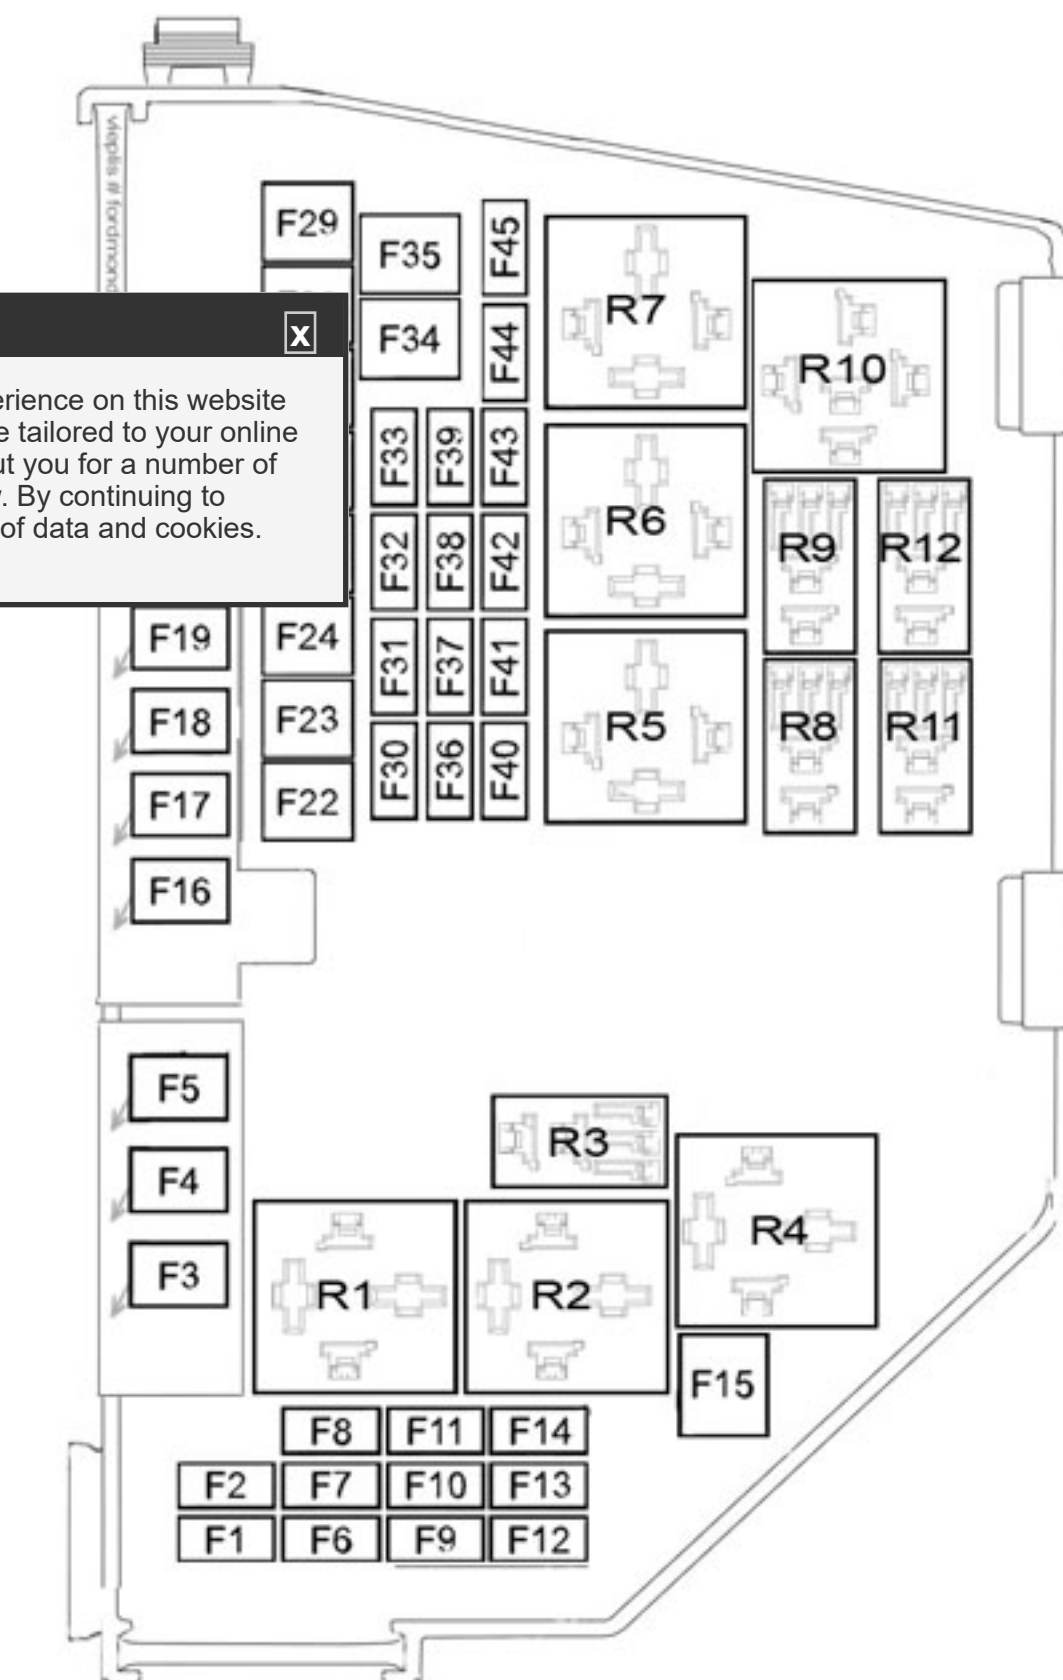

#### Fuse types

- Conventional mini blade fuses (F1-F2, F6-F14, F30-F33, F36-F45);
- square 895-series JCASE fuses (F15, F22-F29, F34-F35),
- bolt-on 488-series MIDI fuses (F3-F5, F16-F21).

#### Fuse information

- F1 – 10A – Transmission control module;
- F2 – 5A – [Diesel engines] Glow plug monitoring, [1.6 Duratec-16V Ti-VCT] Degas valve;
- F3 – 80A – [2.3 Duratec-HE for the Middle East countries] Engine cooling fan - twin, [2.0 Duratorq-TDCi] electro-hydraulic power-assisted steering (EHPAS);
- F4 – 60A – Glow plugs;
- F5 – 60A – Engine cooling fan - single;
- F6 – 10A – HEGO/Lambda sensors 1 (engine management), variable valve timing (engine management);
- F7 – 5A – Relay coils;
- F8 – 10A – Powertrain control module ECR;
- F9 – – Not used;
- F10 – 10A – Engine control module;
- F11 – 10A – Valves, MAF control (engine management);
- F12 – 10A – [Diesel engines] Water in fuel sensor, coils, MAF (engine management);
- F13 – 15A – Air conditioning relay;
- F14 – 15A – Diesel filter heater;
- F15 – 40A – Starter relay;
- F16 – 80A – Diesel auxiliary heater (PTC);
- F17 – 60A – Central fuse box supply A;
- F18 – 60A – Central fuse box supply B;
- F19 – 60A – Rear fuse box supply C;
- F20 – 60A – Rear fuse box supply D;
- F21 – – Not used;
- F22 – 30A – Windscreen wiper module;
- F23 – 25A or 30A – Heated rear window (replace with the same A rating as the one removed);
- F24 – 30A – Headlamp washer;
- F25 – 30A – ABS valves;
- F26 – 40A – ABS pump;
- F27 – 30A – Fuel fired heater;
- F28 – 40A – Heater blower;
- F29 – – Not used;
- F30 – – Not used;
- F31 – 15A – Horn;
- F32 – – Not used;
- F33 – 5A – Light switch module, engine compartment fuse box coils;
- F34 – 40A – Heated windscreen, LH side;
- F35 – 40A – Heated windscreen, RH side;
- F36 – 5A – Anti-lock Braking System (ABS);
- F37 – 10A – Heated front washer jets;
- F38 – 5A – Adaptive cruise control (ACC);
- F39 – 15A – Adaptive front lighting system (AFS);
- F40 – – Not used;
- F41 – 20A – Instrument panel (15 feed);
- F42 – 10A – Engine control module, transmission control module, Electro-hydraulic power-assisted steering (EHPAS) (15 feed);
- F43 – 5A – Headlamp levelling, adaptive front lighting system (AFS) (15 feed);
- F44 – 20A – [2.5 Duratec-ST] Vacuum pump (15 feed);
- F45 – 15A – Rear window wiper (15 feed).

#### Relay information

- R1 – Starter relay;
- R2 – PGM relay
- R3 – Air conditioning clutch relay
- R4 – [Diesel engines] Glow plug relay, [1.6 Duratec-16V Ti-VCT] Degas valve;
- R5 – Cooling fan relay;
- R6 – Heated windscreen relay;
- R7 – 15 relay;
- R8 – Windscreen wiper intermittent wipe relay;
- R9 – Horn relay;
- R10 – Headlamp washer pump relay;
- R11 – Windscreen wiper on/off relay;
- R12 – Auto Trans Startlock relay.

### Central fuse box – fuse information


Central fuse box, also known as Auxiliary Junction Box (AJB) – fuse information:

- F1 – 5A – Rain sensor module;
- F2 – 10A – Supplemental restraint system (SRS) supply;
- F3 – 5A – Yaw rate sensor (for ESP);
- F4 – 7.5A – Electronic 15 feed, accelerator pedal supply, electronic fuse;
- F5 – 15A – Rear window wiper relay;
- F6 – 15A – Audio system (including voice control module);
- F7 – 7.5A – Steering wheel module;
- F8 – 5A – Instrument cluster;
- F9 – 15A – Main beam supply;
- F10 – 20A – Power sunroof supply;
- F11 – 7.5A – Reversing lamps relay (30 feed);
- F12 – – Not used;
- F13 – 15A – Front fog lamp supply;
- F14 – 15A – Windscreen washers supply;
- F15 – 10A – Adaptive cruise control (ACC);
- F16 – – Not used;
- F17 – 10A – Interior lamps;
- F18 – 5A – Engine immobiliser;
- F19 – 15A – Cigar lighter (including rear seat lighter socket, where fitted);
- F20 – – Not used;
- F21 – 5A – Remote frequency receiver, interior motion sensor;
- F22 – 20A – Fuel pump;
- F22 – 7.5A – [2.2L Duratorq-TDCi] Fuel pump;
- F23 – – Not used;
- F24 – 5A – Ignition switch;
- F25 – 10A – Fuel filler flap unlock;
- F26 – 5A – Battery backup sounder (alarm system), OBD II (on-board diagnostic system);
- F27 – 5A – Steering column unit, climate control module;
- F28 – 5A – Brake lamp switch.

### Rear fuse box

#### Fuse and relay layout

Rear fuse box, also known as Rear Junction Box (RJB).

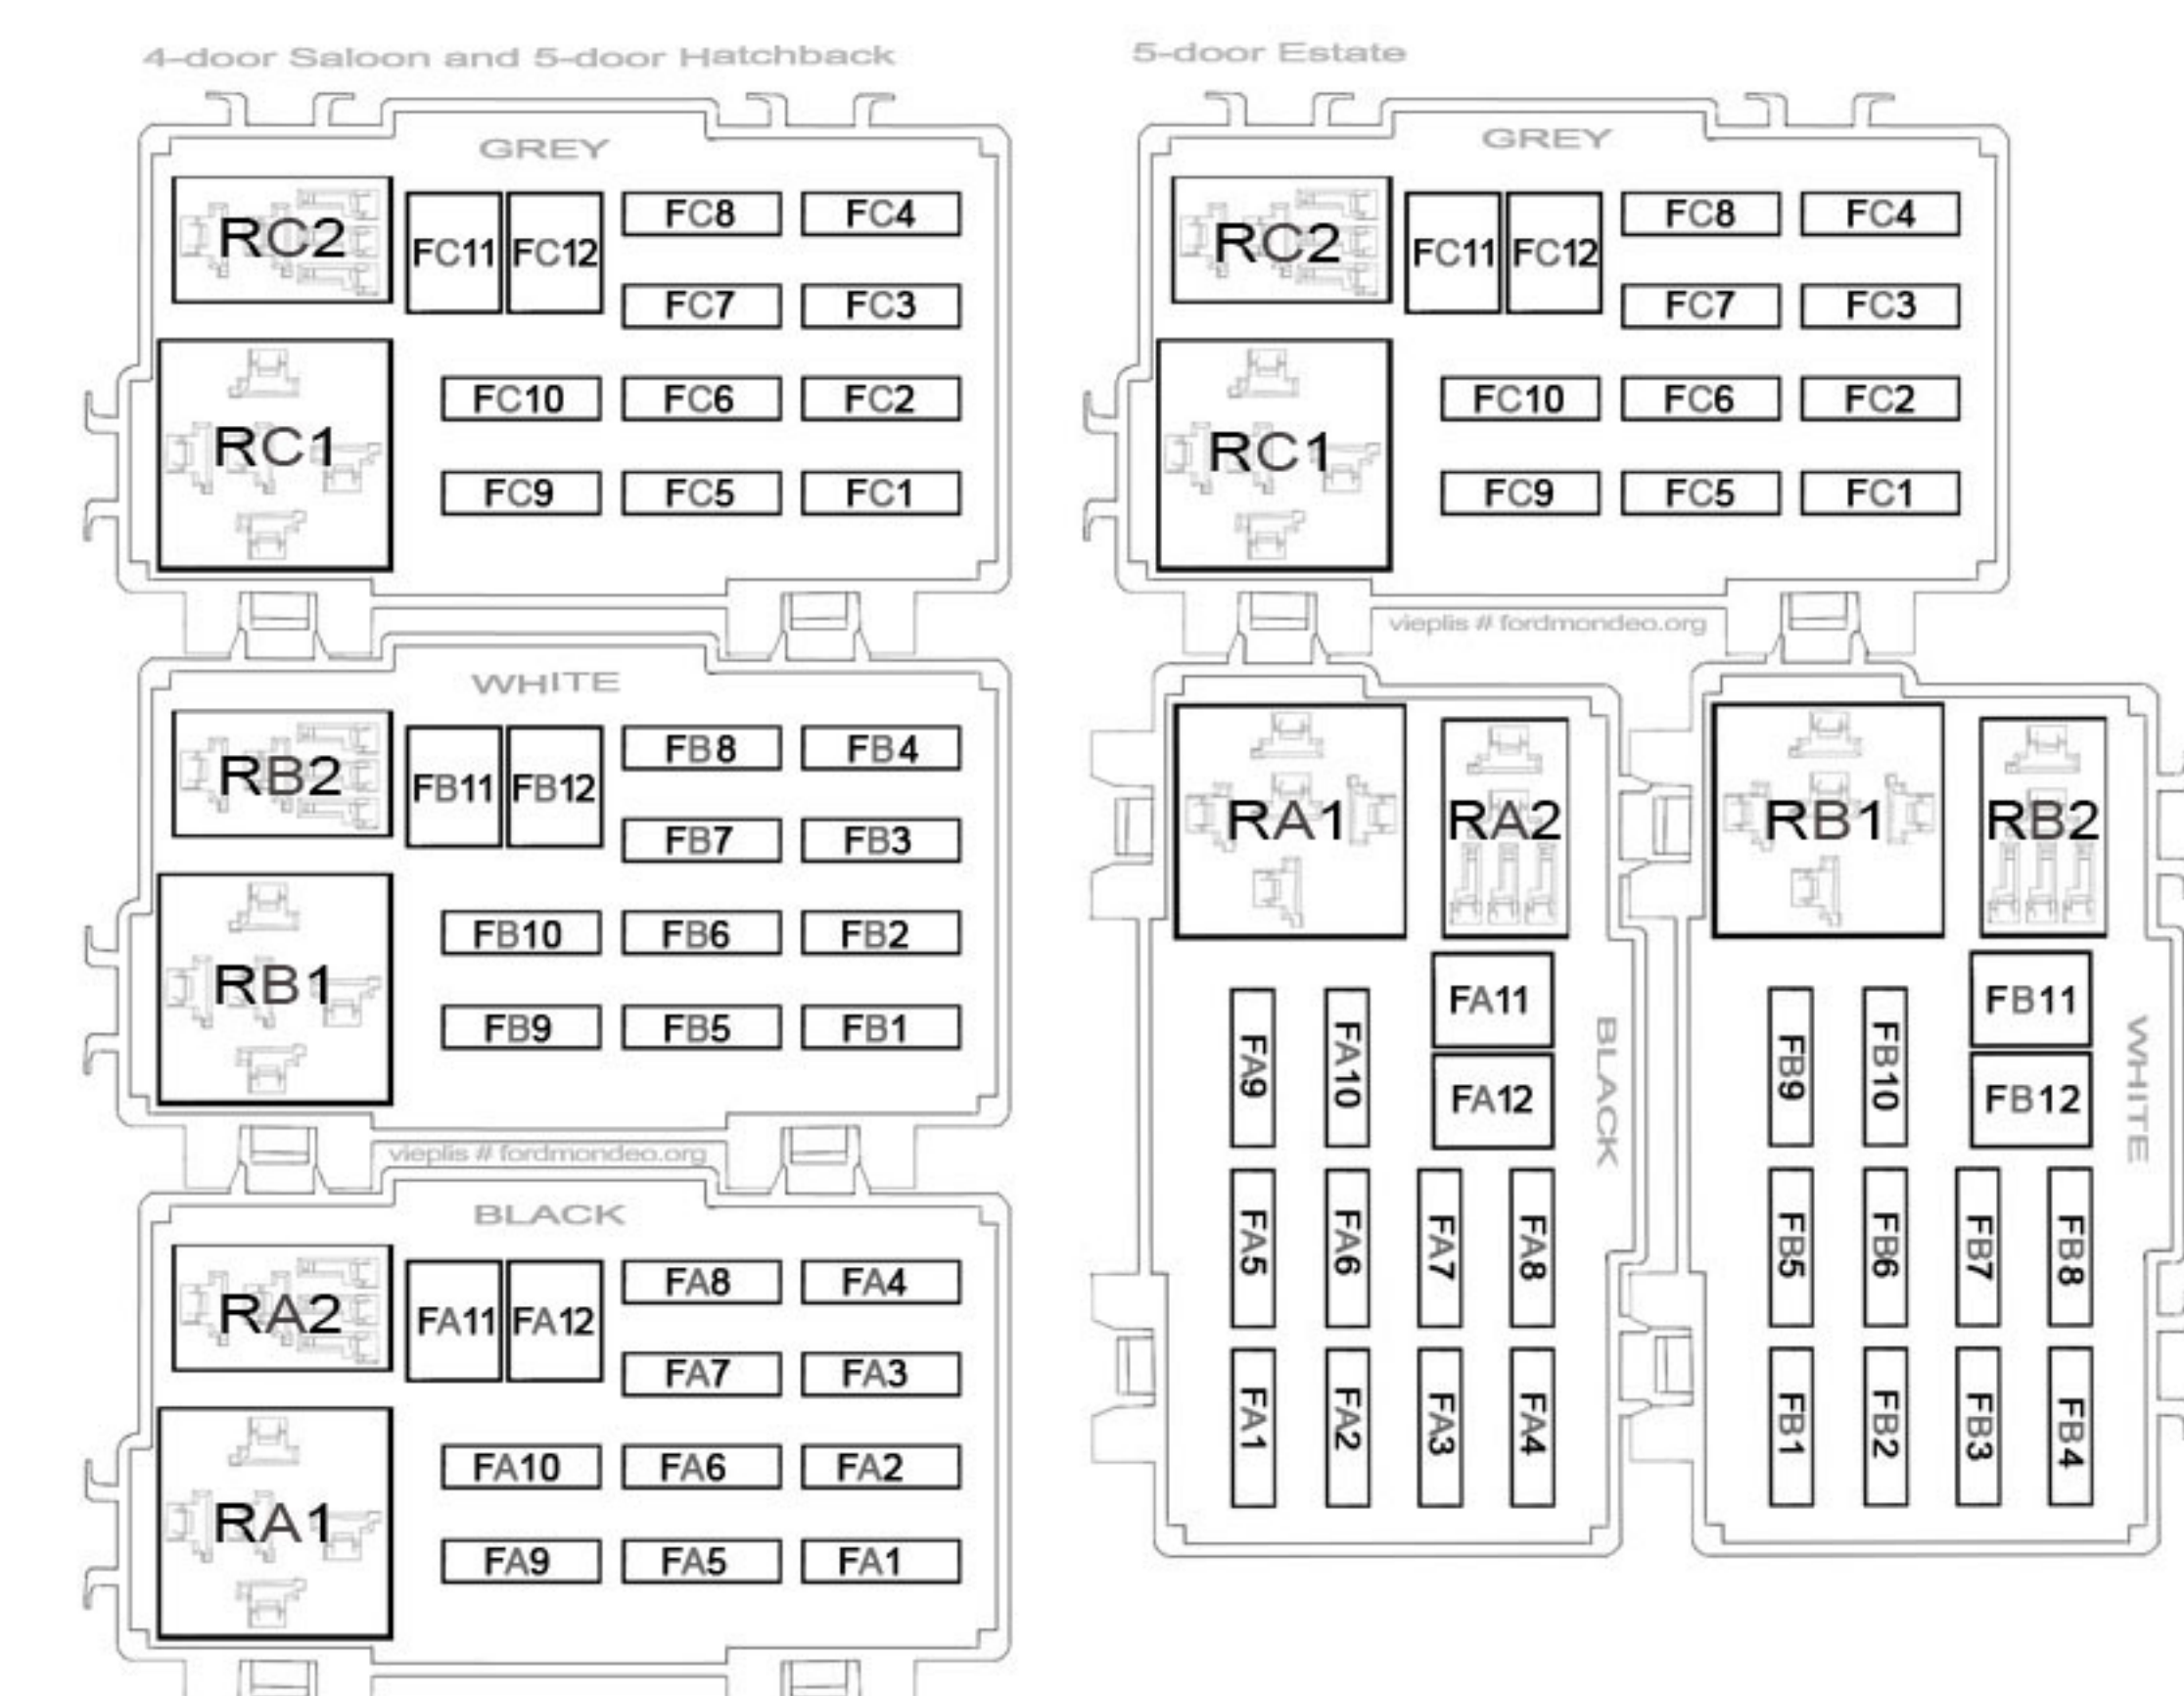

#### Fuse information

- FA1 – 25A – Door module, LH front (window up/down, central locking, electric folding mirror, heated mirror);
- FA2 – 25A – Door module, RH front (window up/down, central locking, electric folding mirror, heated mirror);
- FA3 – 25A – Door module, LH rear (window up/down);
- FA4 – 25A – Door module, LH rear (window up/down);
- FA5 – 10A – Rear locking (without rear door modules);
- FA6 – 15A – Auxiliary power socket;
- FA7 – 5A – Relay coils;
- FA8 – 20A – Steering column lock;
- FA9 – – Not used;
- FA10 – 30A – Power seat, driver;
- FA11 – 20A – Accessories, trailer module;
- FA12 – – Not used;
- FB1 – 5A – Parking aid module;
- FB2 – 15A – Suspension module;
- FB3 – 15A – Seat heater, front – driver;
- FB4 – 15A – Seat heater, front – passenger;
- FB5 – 15A – Seat heater, LH rear;
- FB6 – – Not used;
- FB7 – 15A – Seat heater, RH rear;
- FB8 – – Not used;
- FB9 – 30A – Power seat, passenger;
- FB10 – 10A – Anti-theft alarm horn;
- FB11 – – Not used;
- FB12 – – Not used;
- FC1 – – Not used;
- FC2 – – Not used;
- FC3 – – Not used;
- FC4 – – Not used;
- FC5 – 7.5A – CD changer, rear seat entertainment system;
- FC6 – – Not used;
- FC7 – 5A – Power seat memory function module;
- FC8 – 20A – Keyless entry;
- FC9 – – Not used;
- FC10 – – Not used;
- FC11 – – Not used;
- FC12 – – Not used.

#### Relay information

- RA1 – Heated rear window relay;
- RA2 – Rear window wiper relay;
- RB1 – Rear 15E alarm horn;
- RB2 – Anti-theft alarm horn relay;
- RC1 – – Not used;
- RC2 – – Not used.

Category: [Mondeo Mk4](#)

**FordWiki Infobox**  
Courtesy of [TalkFord.com](#)

Author:	Vieplis
Ford Model:	Mondeo Mk4
Estimated Cost:	N/A
Difficulty?	N/A
How long does this take?	N/A

view edit history

